

 



Baitwell Light

Part#: 69301-KK

INSTALLATION INSTRUCTIONS


PARTS/TOOLS NEEDED:

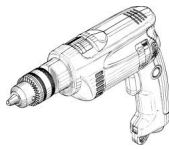			
Baitwell Light	Butt Splice Connectors (Not Provided)	Power Drill	Application Specific Sealant (not provided)


IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive(+) input.
- Technical Specs:
Voltage: 10 - 14V DC | Current: 0.03A


 
1. Determine the installation location and drill a 3/4" hole. Smooth the hole.

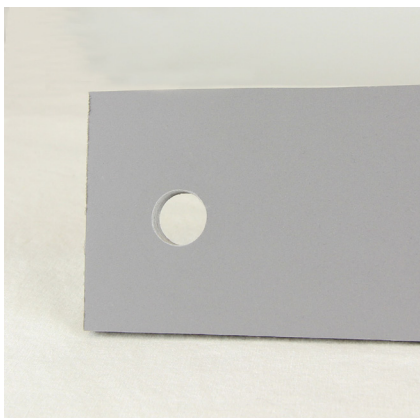

 2. Using the wiring diagrams below, wire the light to the incoming 12V DC power. Test the light.

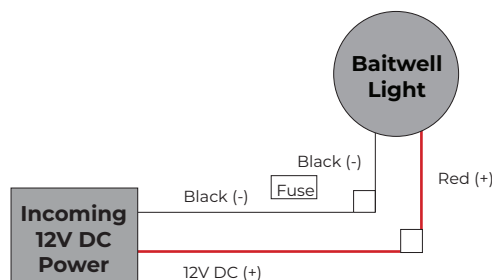

  3. Feed the wires back through the hole and push the light into the mounting surface. Use application specific sealant around the light to prevent any ingress of water. Tighten the nut on back to hold it in place.

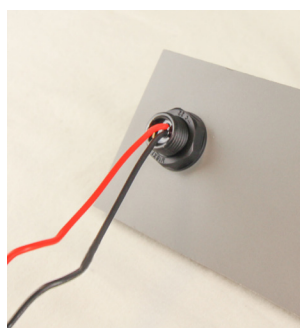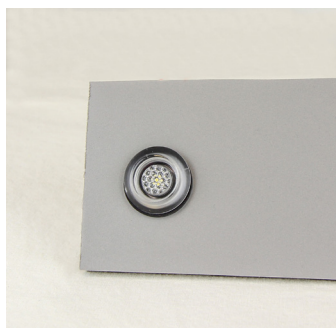

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00192 · Rev A · 07/07/21