




# 3.5" Radiance™ Light

Part#: 69343

## INSTALLATION INSTRUCTIONS

### PARTS/TOOLS NEEDED:

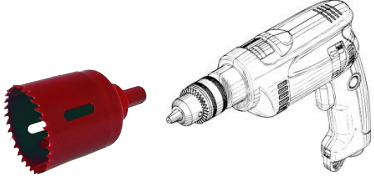		
Radiance Overhead Light	Butt Splice Connectors (not provided)	Power Drill w/ Hole Saw Bit

### Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC

#### 1. Determine the installation location and drill a hole.



Mounting Method	Cut-out
Leaf Spring/Spring	2-5/8"
Screw	2-1/2"



#### 3. Install and test the light.



#### 2. Using the wiring diagram below to wire the light to the units power.

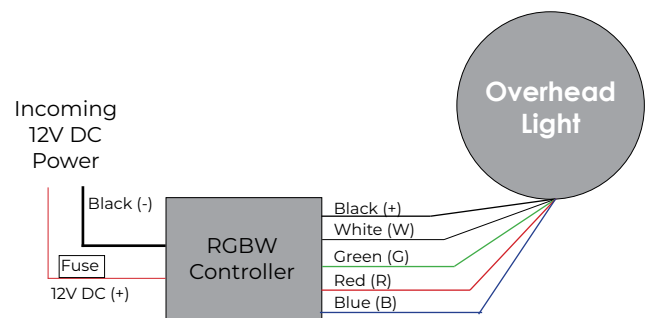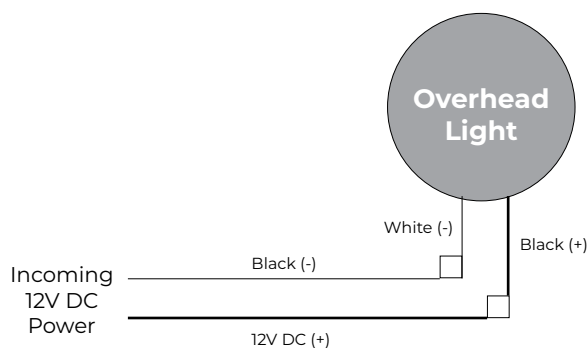

3030 Corporate Grove Dr.  
Hudsonville, MI 49426  
Phone: 616.396.1355  
[itc-us.com](http://itc-us.com)

For warranty information please visit [www.itc-us.com/warranty-return-policy](http://www.itc-us.com/warranty-return-policy)  
DOC #: 710-00077 · Rev B · 08/22/23