

Courtesy Light

INSTALLATION INSTRUCTIONS

Part#: 69610, 69620, 69650, 69660 & 69670

PARTS/TOOLS NEEDED:

					
Courtesy Light	Decorative Bezel	Mounting Screws	2" Hole Saw Bit (not provided)	Butt Splice Connectors (not provided)	Power Drill

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

*Disconnect power before installing, adding or changing any component.

*To avoid a hazard to children, account for all parts and destroy all packing materials.

- Determine the installation location for your light. Once determined drill a 2" hole using a hole saw.

 


- Wire the light following the wiring diagrams below.


If using a two wire version a standard switch can be used. The light should be turned off and on to cycle through the colors.

If the light is off for more than 30 seconds it will restart the cycle.

If using a three wire version, a three position switch will be required.

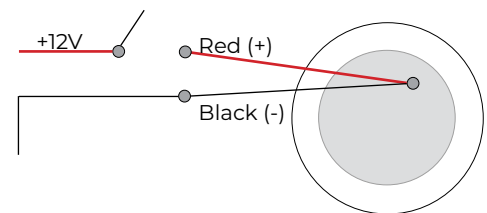

69660

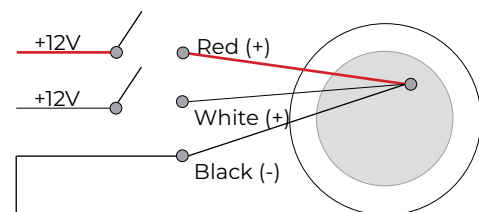 

69610, 69620, 69650 & 69670

- Feed wires back through the hole and screw the light in place using the screws provided. Attach the bezel by lining up the cutouts and rotating until it snaps in place.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Rev C · 09/24/20