

Porch Light

Part#: 69767 or 69768

INSTALLATION INSTRUCTIONS

PARTS NEEDED:

			
Porch Light	Power Drill (Not Provided)	Screwdriver (Not Provided)	Silicone (Not provided)

General Considerations

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not install any luminaire assembly closer than 6" from any combustible materials.
- Max voltage: 12V DC \pm 20%

1. Place light in location to be installed. Pre drill mounting holes with 1/8" bit. Then mark the wire exit hole location and drill 1/4" hole for wire exit.




3. Use the Phillips screwdriver to tighten the porch light into place.



5. If the light ever needs to be removed. The bezel will snap off using a flat head screwdriver in the slot on the side of the light. LED light source is not replaceable.



2. Apply a bead of silicone or butyl tape around the backside perimeter of the porch light to seal perimeter to mounting surface.

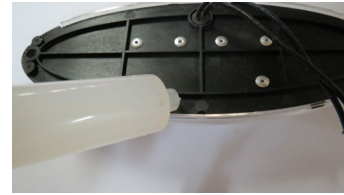

4. Attach the bezel onto the porch light by pushing it on gently until it snaps into place.



6. Connect blue wire (+ AM) to power source. Connect black wire (+) (White LED's) to up position on a 3 way switch. Connect blue wire (+) (Amber LED's) to down position on 3 way switch. Connect white wire (-) to ground.

Note: Do not operate amber & white at the same time as it will void warranty. This is why use with a 3 way switch is recommended so it is impossible to turn both colors on at the same time due to circuit board overheating reasons.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy

Rev A · 10/06/23