

Hatch Lift Pins


Part#: 84250

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:



Lift Pins

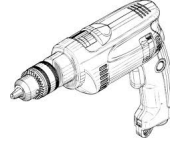


Power Drill

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive(+) input.

1. Drill 1/4" hole in mounting surface
2. Split spring at the base of the rod and spin to remove
3. Remove washer
4. Insert rod through mounting surface
5. Replace washer
6. Replace spring

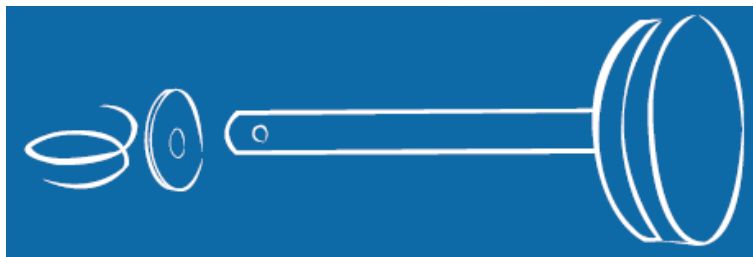

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Rev A · 07/20/16