


Guide PIR Light

INSTALLATION INSTRUCTIONS

Part#: 690030.055-XX or 690030.056-XX

PARTS/TOOLS NEEDED:

			
Guide Light	#8 Pan Head Mounting Screws (Not Provided)	Butt Splices (Not Provided)	Power Drill (Not Provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.


1. Determine the installation location per the viewing angle and distance, Drill 1/2" hole for the wiring. Drill pilot holes sized for the mounting screws.




2. Feed the wires through the hole and connect per diagram below. Screw the light in place. Snap the decorative bezel in place.



3. Follow the wiring diagram below to wire the light to your system. The product is internally fused for a max current of 1A. If greater is detected the unit will shut down and power will need to be cycled to reset the unit. Note, a maximum of 20 units can be daisy chained together.

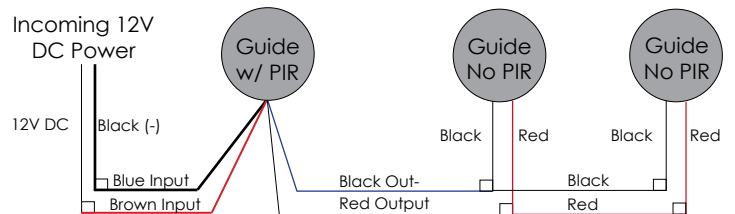

4. OPERATION: The PIR Switch will turn on the lights when it senses motion and will turn off after six minutes if no motion is detected. The switch has a range of 120° and a distance of 3' from the center of the sensor.

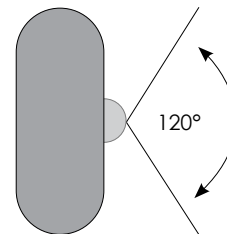

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00070 · Rev C · 11/30/22