






Solstice™ Flex Light

INSTALLATION INSTRUCTIONS

Part#: RRLVVKK-LLLWL-10

PARTS / TOOLS NEEDED:

				
Solstice Flex Light	Mounting Track	Butt Splices (not provided)	Power Drill	#4 Screws (Screw mount track only - not provided)

Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not install any luminaire assembly closer than 6" from any combustible materials.
- It is highly recommended that appropriate fusing be used, to be determined by tape light length.
- Minimum operating voltage is 12V DC.

Installation Considerations For All Flexible Lighting Products

- Do not bend lighting more than necessary. It should only be bent to a 1" radius. Bending to a tight 90 degree angle could cause damage to the circuit.
- Only bend the LED ribbon in one natural direction, do not try to bend in an unnatural direction such as twisting.


**Installation Considerations For RRL Flexible Lighting

- Unroll the entire length of Solstice (RRL) before installing.
- Start at the wire lead end and beginning of channel, work the light into the channel going 6" at a time. The light should go into the channel pretty easily by just thumbing it in.
- When pushing the light into the channel, make sure to push towards the wired end. The silicone on the light is flexible and pushing away from the wired end will leave a gap at the end of the run.
- Do not use any roller as that may cause damage to the LED circuit.

1. Determine the installation location and install the track by either taping or screwing in place. Install the light in the track by gently rocking it back and forth. Refer to installation tips above to ensure a successful installation.



Adhesive Mount Track*

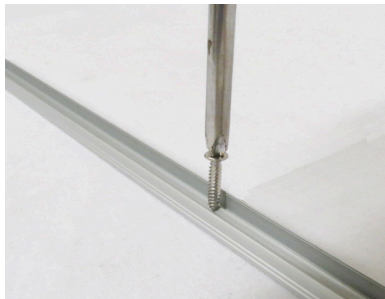


Screw Mount Track*



Installing Light**

2. Follow the wiring diagram below to wire the light to your system.

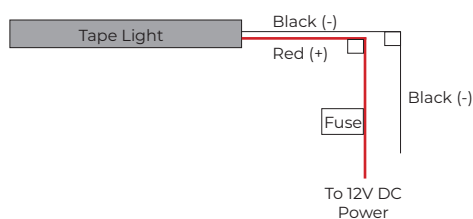


3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com


For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00132 · Rev A · 07/15/19

3. Please review the considerations below to ensure a successful installation.


***RRL flexible lighting cannot be field cut. Field cutting the light will void the warranty.**

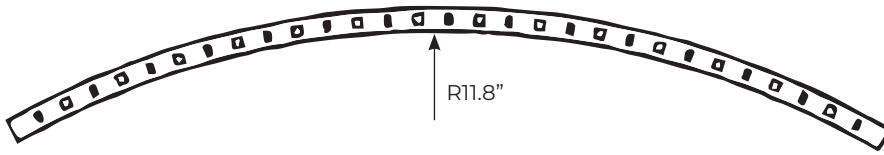

Do not horizontal bend to a radius of less than 11.8"

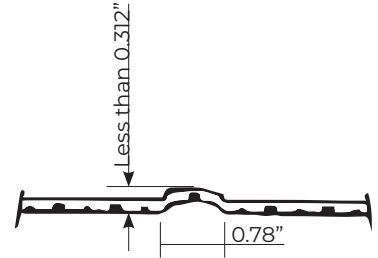

 
Do not axial bend to the height of more than 0.312" within 0.78" segment



Do not bend to a radius of less than 1/2"



Do not twist more than 90° over the length of one 24V segment / Two 12V segments (4" total length)

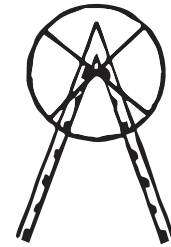

Do not bend flexible light at 90°



Do not bend right at solder joint



Only bend the wire

