





# Prizm Overhead Light

## INSTALLATION INSTRUCTIONS

Part#: 69290, 69292, 69294 & 69295

PARTS NEEDED:			
			
Overhead Light	Mounting Screws	Power Drill (not provided)	Wire Nuts (not provided)
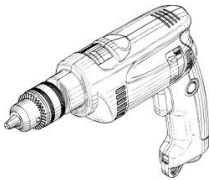
### Safety Instructions


- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Operating Voltage: 10 - 14V DC

### FOR USE AS RECESSED OR SEMI-SURFACE MOUNT LIGHT:

1. Turn bezel counterclockwise to remove
2. Drill hole in mounting surface with 2.125" hole saw
3. Attach wires to power source
4. Install using included screws
5. Turn bezel clockwise to replace

### FOR USE AS SURFACE MOUNT LIGHT:

1. Turn bezel counterclockwise to remove
2. Drill hole in mounting surface for wires
3. Attach wires to power source
4. Install using included screws
5. Turn bezel clockwise to replace

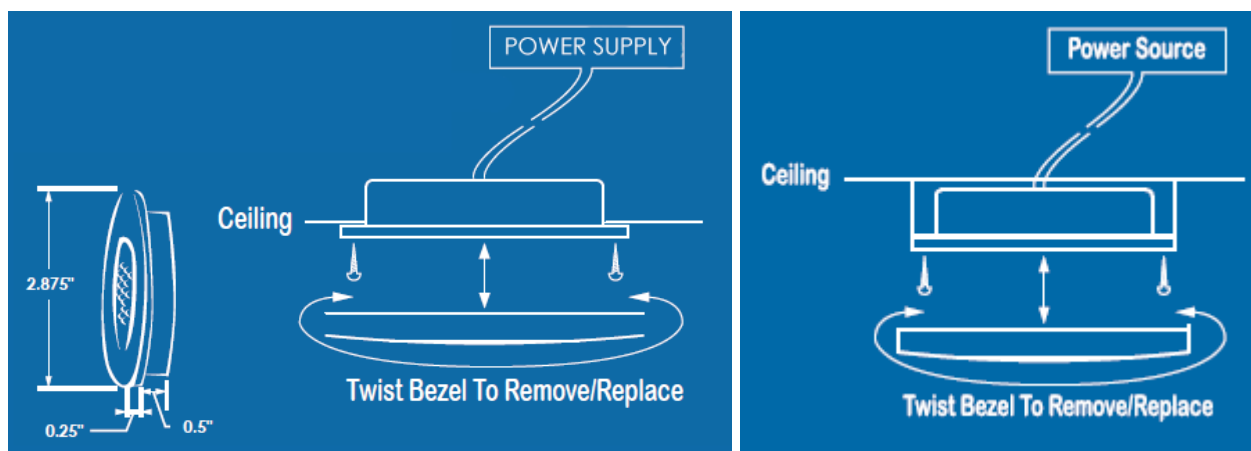

3030 Corporate Grove Dr.  
Hudsonville, MI 49426  
Phone: 616.396.1355  
[itc-us.com](http://itc-us.com)

For warranty information please visit [www.itc-us.com/warranty-return-policy](http://www.itc-us.com/warranty-return-policy)  
Rev A · 07/20/16