





Compass Overhead

INSTALLATION INSTRUCTIONS

Part#: 69400 & 69410

PARTS/TOOLS NEEDED:			
			
Compass Overhead Light	Mounting Screws (Qty: 3)	Butt Splice Connectors (Not Provided)	Power Drill & 2" Hole Saw

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

*Disconnect power before installing, adding or changing any component.

*To avoid a hazard to children, account for all parts and destroy all packing materials.

* It is recommended that fuse protection be added to the positive(+) input.

- Determine the installation location and use the light to mark holes. Drill holes for the screws and cut out 2" hole for light.

69400NS/69410NS




69400/69410




- Wired the light using the wiring diagrams below. Test the light.

Single Color Wire Diagram

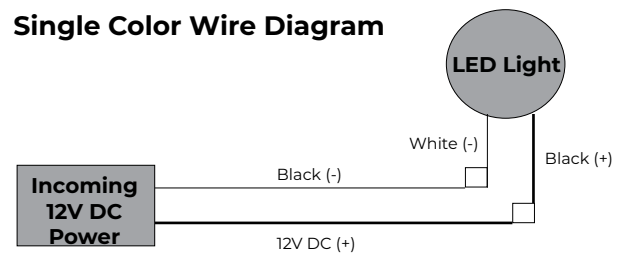


Color Selection Wire Diagram

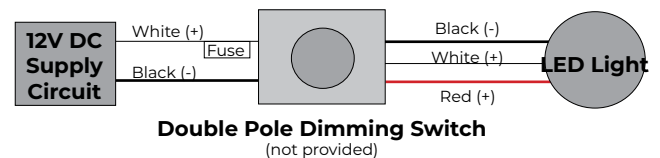

- 69400NS/69410NS** | Screw down the light using the provided screws. **69400/69410** | Push clips on both sides of light up and slide housing and clips through hole. Clips will snap down and hold the light in place.

69400NS/69410NS

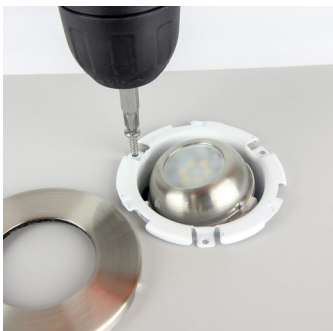

69400/69410



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00112 · Rev A · 04/08/19