


Decor Overhead Light

INSTALLATION INSTRUCTIONS

Part#: 69553 & 69554

PARTS/TOOLS NEEDED:			
			
Decor Overhead Light	Mounting Screws (Qty: 2)	Butt Splice Connectors (Not Provided)	Power Drill & 2.25" Hole Saw

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- *Disconnect power before installing, adding or changing any component.
- *To avoid a hazard to children, account for all parts and destroy all packing materials.
- * It is recommended that fuse protection be added to the positive(+) input.


1. 69554 | Determine the installation location and use the bezel to mark the location of the screw holes and wiring hole. **69553 |** cut out 2.25" hole for light.



2. 69554 | Drill a hole and pull the units wiring through. Screw down the bezel using the provided screws.



3. 69554 & 69553 | Using the wiring diagrams below, wire the light to a three way switch and your incoming 12V DC power. Test the light.

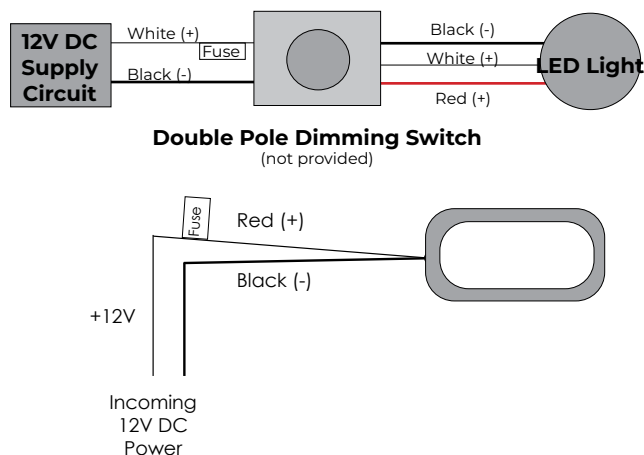

4. 69554 | Feed the wires back through the hole and push the light into the bezel. **69553 |** Push light into hole.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00105 · Rev A · 06/08/2023