

Assurance/Affirm Flood Light

Part#: 69711

INSTALLATION INSTRUCTIONS


PARTS/TOOLS NEEDED:

		
Porch Light	Power Drill (Not Provided)	Silicone (Not provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Can be used in damp or wet locations.
- Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.
- Supply to be fused, 5A max

1. Determine mounting location and drill ¼" hole for wires.
2. Drill pilot holes for light mounting holes.
3. Attach wires to power source. Red is positive and black is negative.
4. Apply a generous spot of silicone (RTV) to the back of the light where the wire goes through the vehicle wall.
5. Hold light to mounting surface, insert and tighten screws until secure.
**LEDs are polarity sensitive and will not light if not attached properly.

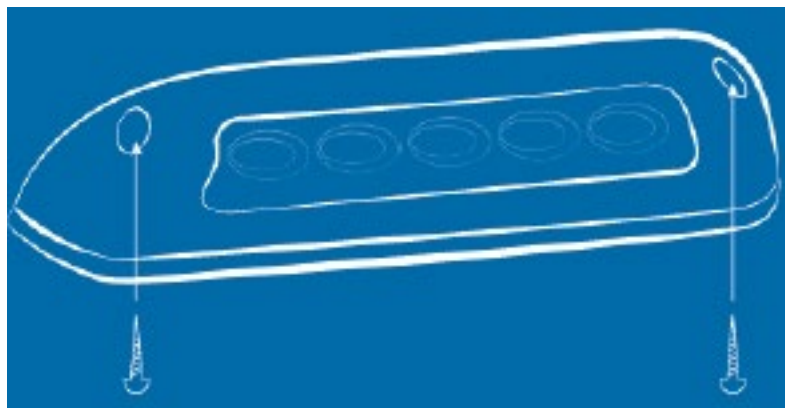

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Rev A · 04/09/24