





Refresh™ Shower Light

INSTALLATION INSTRUCTIONS

Part#: 69870-KK-FF

PARTS/TOOLS NEEDED:

			
Shower Light	Three #8 Pan Head Screws (not provided)	Butt Splice Connectors (not provided)	Power Drill (not provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

1. Determine the installation location for your light and drill a ½" hole. Pull the units wiring through and wire using the diagram at the right.


Screw in the light using three #8 pan head screws¹.

Install gasket on decorative bezel, ensuring it is attached evenly².

Snap bezel in place, making sure to line up the three tabs³.



2. Wire the light following the wiring diagrams below.

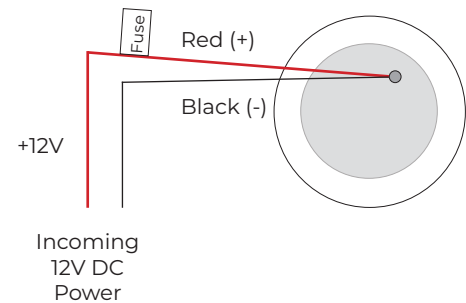

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355

itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00177 · Rev A · 11/17/20