

Approach™ Light

Part#: AL01-XXY-Z

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:

					
Approach Light	Mounting Brackets (Not Provided)	Wire Sleeve & Grommet (purchased seperately)	Alcohol Wipes (Not Provided)	Butt Splices (Not Provided)	Silicone Sealant (Not Provided)



IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Please note mounting brackets are not supplied with this product. Each installation is vehicle specific and mounting bracket required may differ between vehicles. Contact your sales representative for more information on custom mounting brackets.
- The tape/pad backing should not be used as the only mounting method and designed to protect the light and vehicle. Mounting brackets must be used for proper installation.
- This light is protected from reverse voltage and electro static discharge, however, it is recommended that fuse protection be added to the positive (+) input.

1. Determine the installation location and attach mounting brackets (customer provided).
2. If using the tape verison, remove the tape backing and press the light in place. For proper adhesion clean the surface with alchol wipes prior to installation.



3. Wire the light following the wiring diagram below. The wire sleeve and grommet should be used for installations into metal backings to prevent damage to the wire. Additionally, silicone should be used around the wiring hole to prevent any ingress of water into the vehicle.

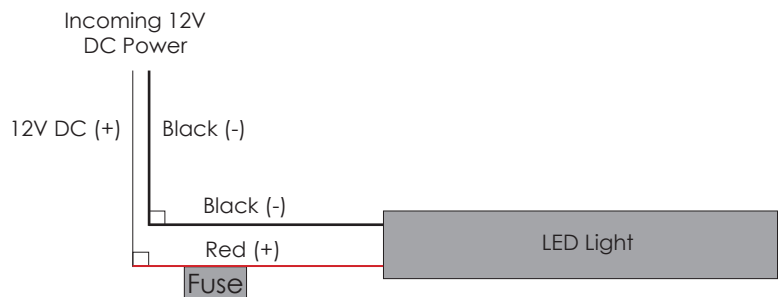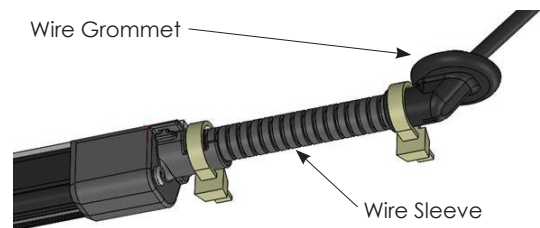

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: TBD· Rev B ·12/06/17