

Soffit™ Undercabinet Light

Part#: 69TL0XXX

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:

				
Undercabinet Light	Power Supply	Mounting Plates w/ Screws (Wood installation only)	Jumper Cables (optional)	Wire Management Clip

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- *Disconnect power before installing, adding or changing any component.
- *To avoid a hazard to children, account for all parts and destroy all packing materials.
- *Use only with UL approved power supply.


1. Wood Overhead Installation:

Clean the mounting surface with a 50/50 mixture of alcohol and water prior to installation. For more detailed instructions* please refer to the 3M website.

The light and switch will come with the mounting plates (optional mounting screws included) already attached to the light, simply remove the tape backing and press in place.

Metal Overhead Installation:

If installing on a metal overhead, remove the mounting plates and attach the light and switch to the overhead.

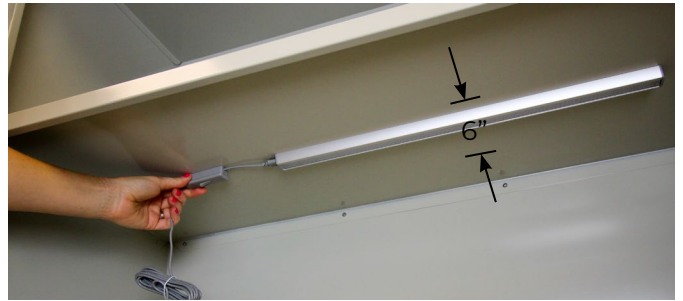

2. Plug the connector on the power supply cord into the light. If using the larger power supply you will also need to plug in the cord on it as well.



3. The wire management clip will come pre-installed on the wire. Install by removing the paper backing and pressing in place.



4. If using more than one light, plug the jumper cable into the ends of the lights. Plug in power supply and turn on lights. Attach wire clips as required to secure wire.



*http://www.3m.com/3M/en_US/bonding-and-assembly-us/resources/full-story/?storyid=b3996cbd-9954-455f-8e72-88e452ca38c0



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00058 · Rev E · 04/09/18