






Surfit™ Table Leg

INSTALLATION INSTRUCTIONS

Part#: 81TS1000, 81TR1000 Series


PARTS/TOOLS NEEDED:

					" Hole Saw Bit" data-bbox="818 141 903 188"/>
Table Base	Floor Base	Table Leg	Power Drill (Not Provided)	#10 Phillips Oval Head Screws (Not Provided)	2.5"/>3.25" Hole Saw Bit (Not Provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

1. Drill* hole in the floor making sure the base will be mounted into solid floor structure (wood, fiberglass, etc.) Using #10 Phillips oval head screws attach the base to the floor.

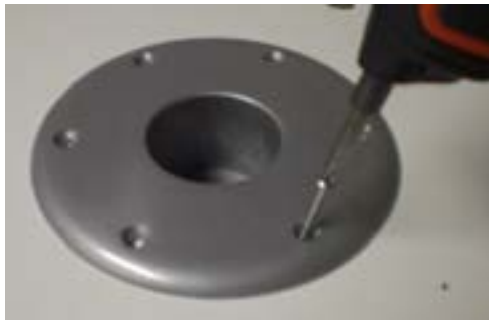

*2.50" Diameter Hole - aluminum base (81TR1000-X)
*3.25" Diameter Hole - polymer base (TR1000HPPR-B)

2. Mount the table base into table top (customer provided) using #10 phillips oval head screws. Make sure the weight of the table top is evenly supported over the table leg.



3. Insert the table leg into the hole in the base. To remove the leg, rotate and pull straight up to remove completely.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Rev Level 3 · 11/15/2022