







IllumaGrip™ Assist Handle INSTALLATION INSTRUCTIONS

Part#: 86433, 86435, 86436 & 86460

PARTS/TOOLS NEEDED:

					
Assist Handle	Power Drill	Butt Splice Connectors (Not Provided)	Wire Grommet (Not Provided)	#8 Flat Head Screws #6 Pan Head Screws (Not Provided)	Silicone Sealant (Not Provided)


IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

1. Mark the install location for your handle. Pre-drill the wire access and mounting holes. To prevent damage to the wires install a wire grommet.



2. Wire the light based on the wiring diagram below, making sure the light is mounted at the top of the handle. Feed wires back into the hole and use silicone sealant around the wires to prevent any ingress of water. For added protection use silicone around the end caps.

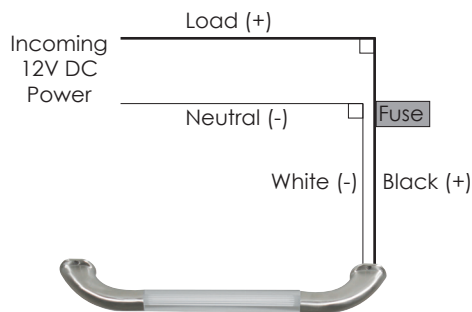

3. For the 86433, 86435 and 86436 metal end caps use #8 stainless steel flat head screws. If installing the 86460 handle with plastic end caps use the #6 pan head screws.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00041 · Rev D · 09/09/24